TOP VIEW OF PLAYFIELD TOP NINE SWITCHES OPERATE SHOT TRIP RELAY TRIPS #4 TRIPS #6 — WHEN 7 OR 10 IS DOWN IS DOWN 3-9 2-8 TRIPS #7 IF PUCK HITS ADJACENT TRIPS #10 IF PUCK HITS ADJACENT SWITCH SIMULTANEOUSLY. SWITCH SIMULTANEOUSLY. 10 5 THESE SWITCHES OPERATE ONLY WHEN I IS DOWN, HOWEVER, THEY ARE INOPERATIVE ON THE SPARE SHOT IF I IS UP. 6-9-10 6-9_10 INOPERATIVE AFTER *6 IS DOWN, EXCEPT RIGHT SWITCH OPERATES *10. INOPERATIVE AFTER 4 IS DOWN, EXCEPT LEFT SWITCH OPERATES *7. 8 1-3-9-5 5-8-9 2-8 1-2-8-5 3-9 5-8-9 ALSO *4 AND *6 WHEN 2-8 IS UP AND *1 IS DOWN. AND #4 WHEN 3-9 IS UP AND *I AND*2-8 ARE DOWN. **EXPLANATION** 1-5PANEL SWITCH NUMBER THESE SWITCHES OPERATIVE ONLY WHEN PUCK HITS THESE SWITCHES AND ADJACENT SWITCH SIMULTANEOUSLY. - Refers to relays PLAYFIELD SWITCH DIAGRAM tripped. DOWN = Means relay is tripped. UP = Means relay is latched. FORM ABC-CONGRESS-1003

N. K.