
## **Handling Your Bally Slot Machine**

Your Bally slot machine is probably headed to your man-cave, but you realize it's quite heavy. In fact, it weighs somewhere around 220 lbs. Being as it's top-heavy, it becomes quite awkward to handle. So, here are a few tips on moving the machine.

First, be sure you have a suitable stand to place it on. An ideal height would be from 24 to 28 in. off the ground. And, the stand must be able to maintain the weight of the machine.

To lighten the machine and make it much easier to handle, we recommend removing the coin hopper, reel assembly and front door. Removal of these items will lighten it considerably.

Step 1: Unplug connectors 1, 2, and 3. Remove screws A and B which hold P clips onto the brackets.

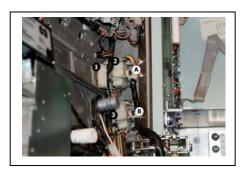

Step 2: Remove ground strap screw C that holds the strap to the upper hinge.



Step 3: Using a 7/16" wrench, remove D and E hex nuts on lower hinge.



Step 4: Remove F and G hex nuts on lower hinge. Keep one nut on one stud until after step 5.



Step 5: Unplug the ribbon cable connector that's attached to the CPU board. Take extra care to be sure you don't damage the fragile pins.



Remove the last hex nut, then carefully lift the door off of the machine. Reverse this procedure to re-install, being very careful when inserting the CPU DIP connector as these 16 pins are VERY fragile and can be damaged easily.