

To program progressive display:

Remove upper glass. Two buttons are found on lower section of front panel.

Hold LEFT and RIGHT buttons in, press the hopper TEST button 8 times. Continue to hold those buttons for a few seconds.

Upper Jackpot program mode starts here.

Display: xx2801

Where digit 1 is on the far right of the display

Note: Audit keyswitch is on right side of cabinet. You can press the microswitch inside to activate.

Press RIGHT button to select thru from xx2801 to xx2809. Press LEFT button to increment each digit. This is to program the upper jackpot display.

Hit Audit keyswitch

Displays xx2901. This is for programming the lower jackpot display. Repeat as above.

Hit Audit keyswitch

This shows upper jackpot current values xx3001

Hit Audit keyswitch

This shows lower jackpot current values ...3101

Hit Audit keyswitch

This sets percent values from 1% to 16% of the coin value, i.e. 16% of 0.25c = 0.04c

Hit Audit keyswitch

This sets coin value from 0.01c to \$5.00