

SPEAKER CONNECTION CHART

PHONOGRAPH SPEAKER SYSTEM (16 OHMS)		70.7 VOLT CONSTANT VOLTAGE SPEAKERS	500 OHM SPEAKERS		8 OHM SPEAKERS	
WATTS	CONNECT TO TERMINALS	Connect in parallel to terminals 5 & 9. Watts shown by volume level control on each speaker.	WATTS PER SPEAKER	CONNECT TO TERMINALS	WATTS PER SPEAKER	CONNECT TO TERMINALS
16	6 & 8		3.5	8 & 9	7	6 & 7
6.25	5 & 7		1	5 & 8	2.5	5 & 6
2.5	6 & 7		<i>Watts into any remote speaker must be 3 times phono speaker watts for equal loudness.</i>			
1	5 & 6					

TOTAL WATTS FOR ALL SPEAKERS (PHONO AND/OR REMOTE) MUST NOT EXCEED 22 WATTS.

AMi *Incorporated*

GRAND RAPIDS, MICHIGAN